

## PORTA-DOCK, INC.

**PART NO.**

PAN04


**DESCRIPTION**

CPPD PANEL CLIP

**Thank you for purchasing our product!**  
**Please read these instructions and follow the step by step.\***

**TOOL REQUIRED:** 7/16" WRENCH/SOCKET

Place the stop bolt and nut (**REF. # 1 & 2**) through the top hole in the wider base plate (**REF. # 3**). Line up the base plate with the inside edge of the backer board on the panel. Secure in place with lag bolts and washers (**REF. # 4 & 5**). (Drilling a 1/8" pilot hole will make this step easier) Bolt the narrow locking plate (**REF. # 6**) to the wide bracket using the bar knob (**REF. # 7**), leave loose at this time and turn the plate so that it is parallel to the backer board. Place panel in to the dock frame. Turn the plate until it hits the stop bolt and it is into the slot in the dock frame. Tighten the bar knob.

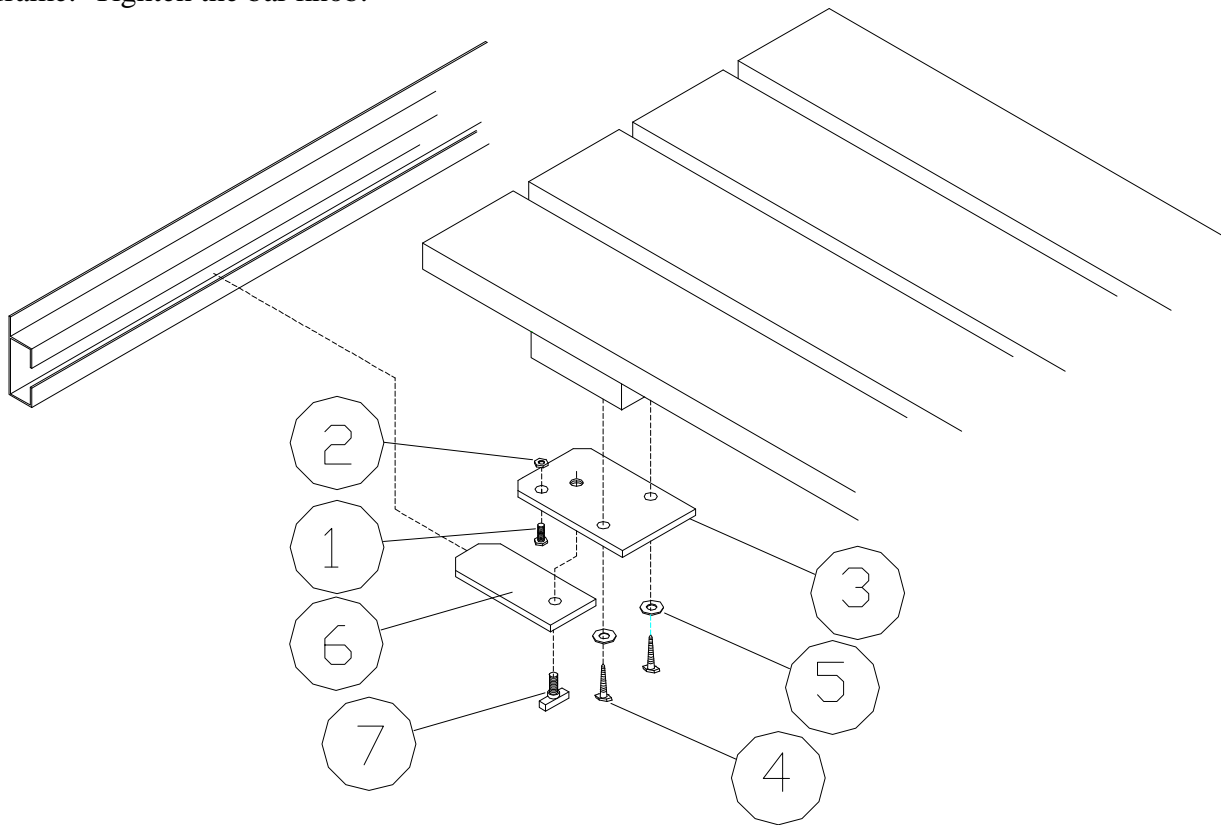

REF.#	PART #	DESCRIPTION	QTY
1	5111	BOLT 1/4" X 3/4"	2
2	5055	NUT 1/4"	2
3	76000	BASE PLATE	2
4	5216	LAG SCREW 1/4" X 2" ZINC	4
5	5075	WASHER 1/4"	4
6	77000	LOCKING PLATE NARROW	2
7	5059	BAR KNOB	2

Porta-Dock, Inc.