

PORTA-DOCK INC.


09G DELUXE GUIDE ON RAIL KIT 9'
14G DELUXE GUIDE ON RAIL KIT 11'

Step 1. Place the bottom leg brackets (**Ref. No. 1**) over the top bed cross tube with the slant of the upright tube toward the outside of the lift.. On vertical lifts the uprights will be facing the inside of the bed, and on cantilevers one upright will be facing the middle of the bed and one will be facing the outside. (They are placed so the uprights are on the same side of the bed as the bunk uprights.) Place two 3/8" X 3" bolts (**Ref. No. 4**) through the holes in the channel and finger tighten on the 3/8" nuts (**Ref. No. 6**) and washers (**Ref. No. 5**).

Step 2. Place the top rail brackets (**Ref. No. 2**) into the upright tubes of the bottom brackets, making sure that the horizontal stub tube is toward the inside of the lift. Temporarily hold in place with 1/2" X 5/8" set screw (**Ref. No. 8**).

Step 3. After all four brackets are installed, bolt the bunk rail (**Ref. No. 3**) to the stubs of the upright brackets with 3/8" X 2 1/2" bolts and nuts (**Ref. No. 7 & 6**). After the bunk rails are installed, slide the brackets into the position that you want them and tighten the bolts. Adjust the rails to the desired height and tighten the set screws. Tip the bunks to match the contour of your boat and tighten the bolts.

Caution: Make sure that the mounting brackets for the guide on rails do not interfere with the movement of the lift's bed.

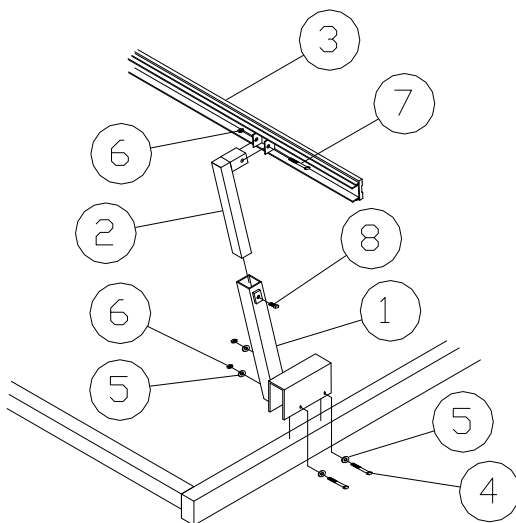

REF #	PART#	DESCRIPTION	QTY
1	38S	DELUXE GUIDE ON BOTTOM LEG BRKT LEFT2	
	37S	DELUXE GUIDE ON BOTTOM LEG BRKT RIGHT	2
2	42S	DELUXE GUIDE ON TOP BRACKET	4
3	26F	BUNK RAIL 136" (09G)	2
	87C	BUNK RAIL 156" (14G)	2
4	5084	3/8" X 3" BOLT	8
5	5070	3/8" WASHER	16
6	5056	3/8" NUT	12
7	5083	3/8" X 2 1/2" BOLT	4
8	5172	Set Screw 1/2" X 5/8"	4

Porta-Dock, Inc.