


101C UNIVERSAL WHEEL KIT W/WHEELS

Thank you for purchasing our product!


Please read and follow these instructions step by step

STEP 1. Raise the bed of the lift so it is out of the way when installing the wheel kit. With the lift sitting on a level surface adjust the leveling legs on the lift to approximately 6" high.


STEP 2. Slide two 3" washers (**REF. #9**) onto the axle shaft. Place a 1/4" pin (**REF. #11**) through the holes in the shaft that are six inches apart making sure that the washers are between the two pins. Press the two halves of the PVC bushing (**REF. #2**) onto the shaft between the two pins.

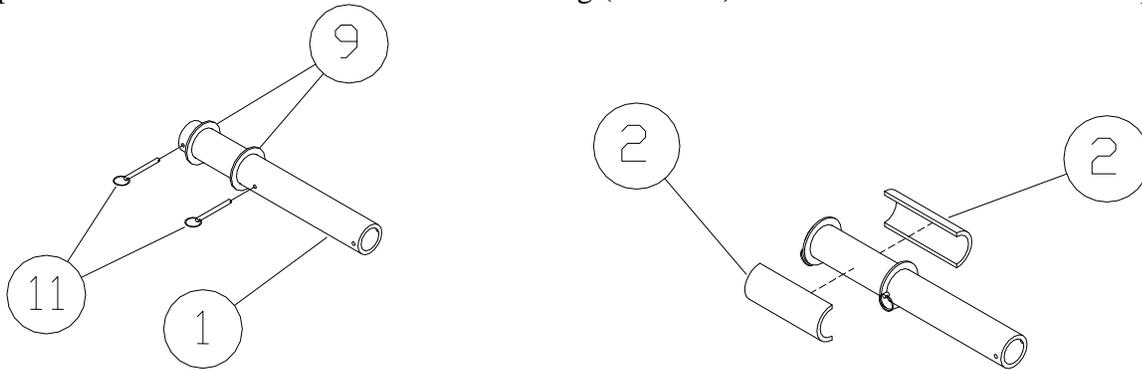

STEP 3. Fasten the assembled stub axle (**REF.# 1**) and saddle plates (**REF. #4 & 5**) to the bottom side tube of the side member with a universal bottom plate, carriage bolts (use the carriage bolts that match the size of the bottom side tube on your lift), washers, and nuts (**REF. #3, 6, 7, & 8**) as shown. Leave nuts loose at this time. Align the axle so that it is parallel with the bottom tube of the lift side member. Tighten nuts at this time.

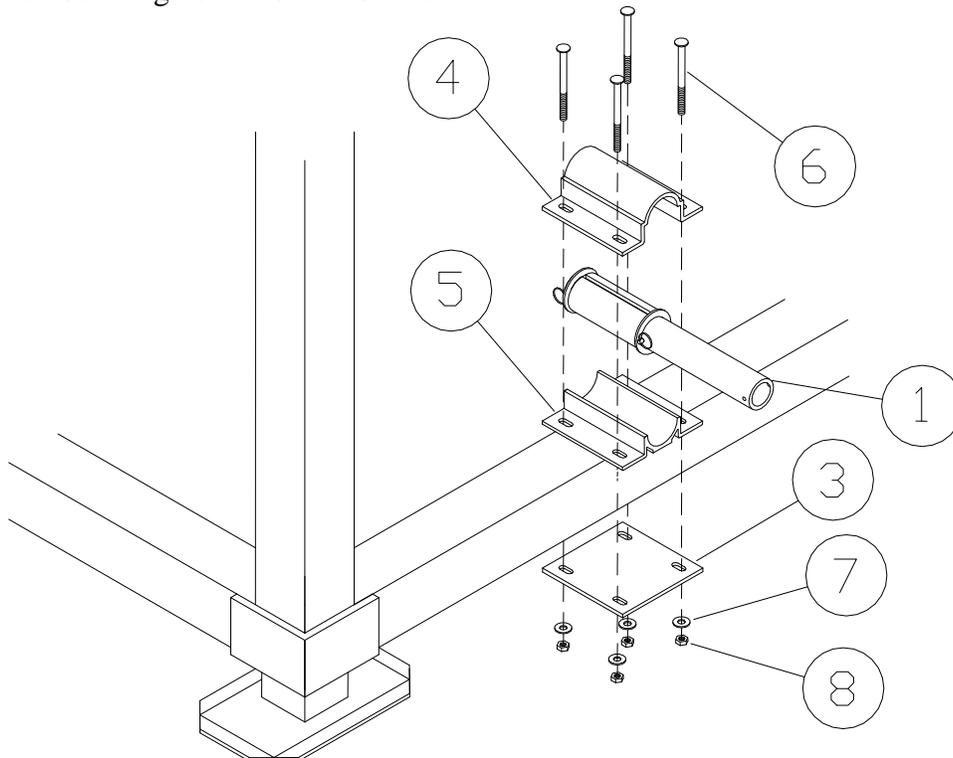

STEP 4. Slide a 3” spacer washer (**REF. 9**) onto the stub axle, then the tire (**REF. #10**), and another 3” washer (**REF. #9**). Secure in place with a pin (**REF. #11**).

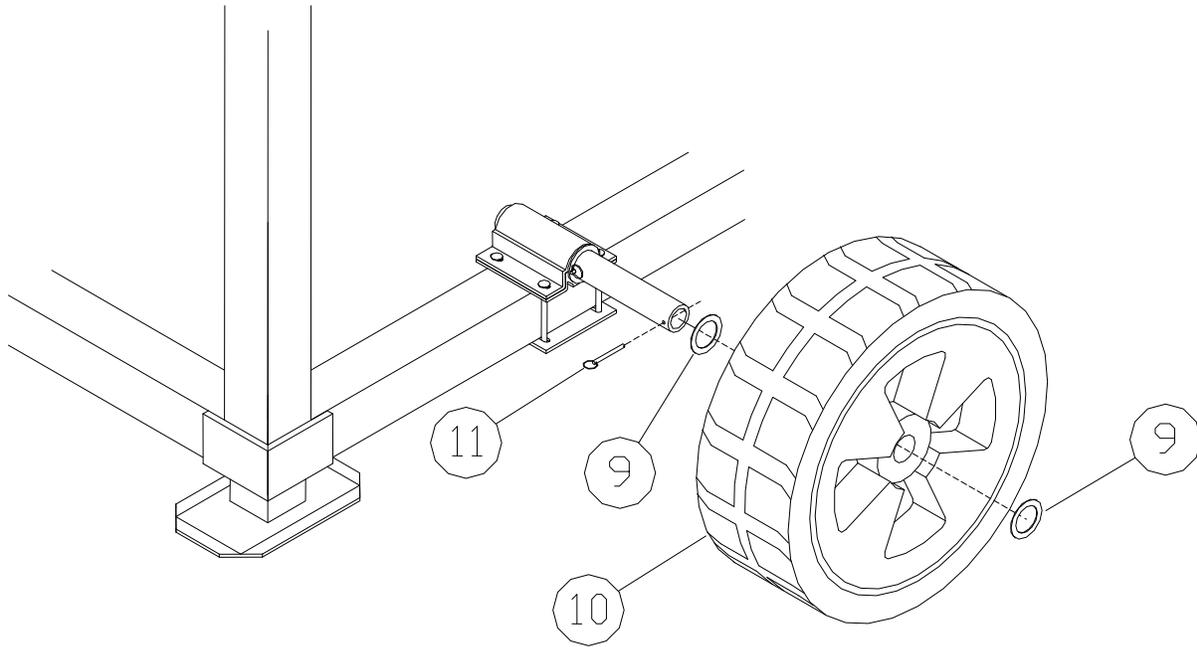

CAUTION: The weight of the lift must be supported by the leveling legs before the lift is used.

101C UNIVERSAL WHEEL KIT PARTS LIST

REF #	PART #	DESCRIPTION	101C QTY
1	61059	STUB AXLE	2
2	0720	PVC BUSHING	4
3	80255	UNIVERSAL BOTTOM PLATE	2
4	80250	TOP SADDLE PLATE	2
5	80251	BOTTOM SADDLE PLATE	2
6	5186	3/8” X 7 1/2” CARRIAGE BOLT	8
	5197	3/8” X 5” CARRIAGE BOLT	8
7	5070	3/8” WASHER	8
8	5056	3/8” NUT	8
9	5077	3” WASHER	8
10	4002	PLASTIC TIRE MOLDED	2
11	5245	1/4” PIN	6