


## Porta-Dock Installation Guide

**Always Lower The Boat Lift Before Attempting Assembly.**


Tools Required: Crescent Wrench and a 9/16 Wrench.




1. Lower the Boat Lift.
2. Remove the Wheel.
3. Remove the Brake Cover.

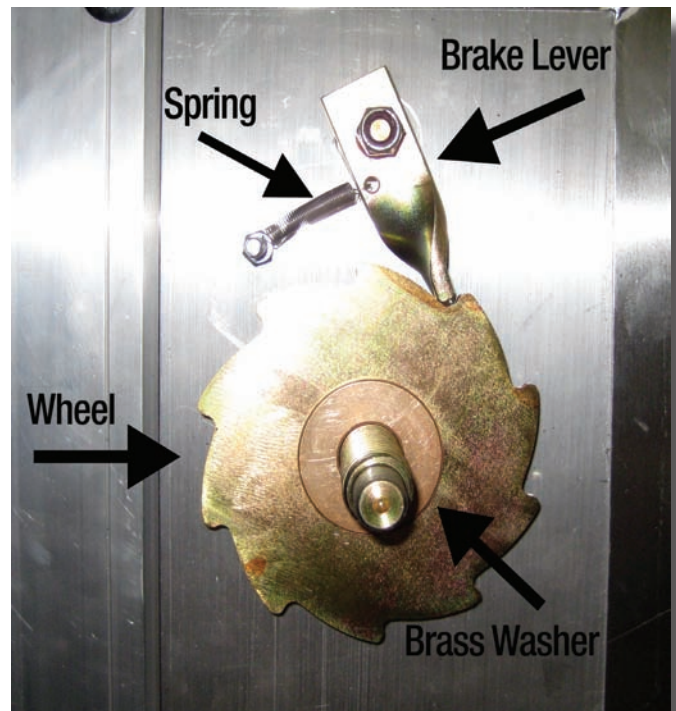


4. Remove the Brake Lever, Spring, Brass Washer and the Gold Wheel. (You Will Not be using these parts with your new Motor.)

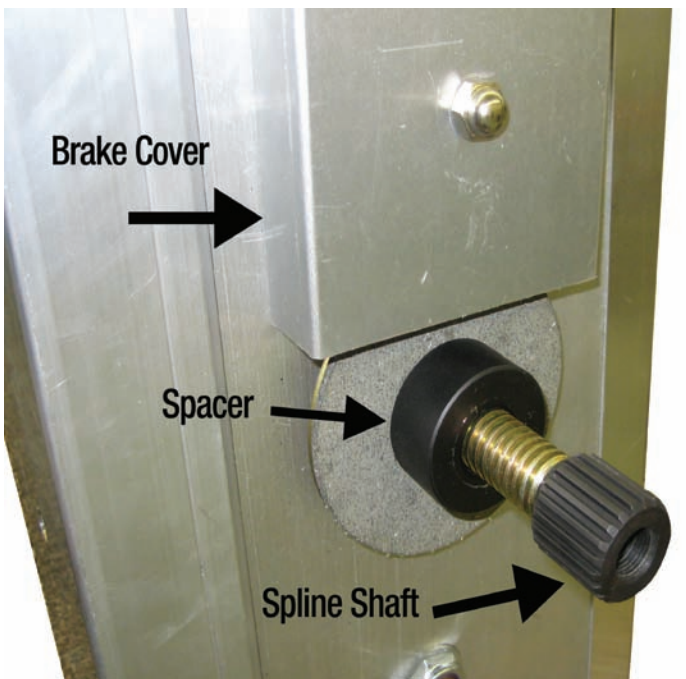

5. Install the Brake Cover. Install the Spacer and the Spline Shaft.

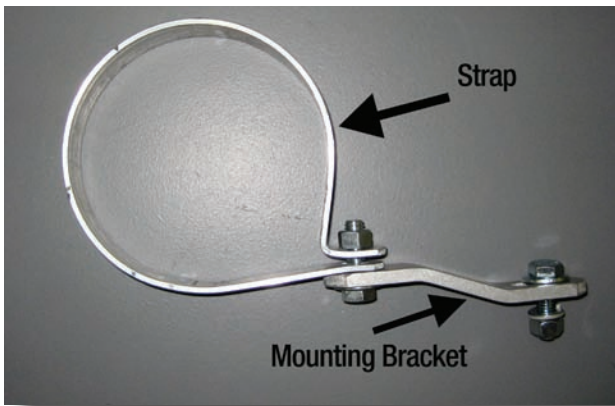

6. Install the Strap and Mounting Bracket onto the Motor Prior to Installation making sure to Leave the Bolts Loose. (Slotted end of Mounting Bracket faces out)

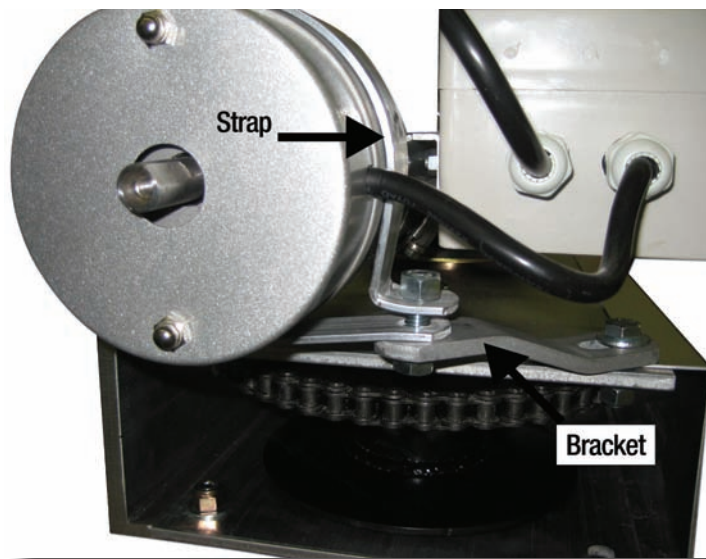

8. Attach the Bracket to the unit and Tighten all Bolts.

**Plug in and Enjoy!**

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding Electrical current requirement please call your authorized dealer or Lift Tech Marine 1-866-319-8877.



7. Slide the Motor down onto the Spline. Install the Bolt and Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.



In case of a Power Outage. This Tool may be Inserted into a Drill to Raise or Lower your Lift.

**Caution: All power used on your dock or lift needs to be GFI protected at the shore line.**