



R95 CANOPY BIRD NETTING

**Thank you for purchasing our product.
Please read these instructions and follow them step by step.**

STEP 1. Unroll enough netting to begin working with. Starting at the first canopy bow from the end of the canopy lay the netting against the inside of the canopy as shown making sure that the netting is one inch up from the bottom of the canopy. Zip tie the netting to the 1/4" X 1" flat bar on the canopy frame next to the bow.

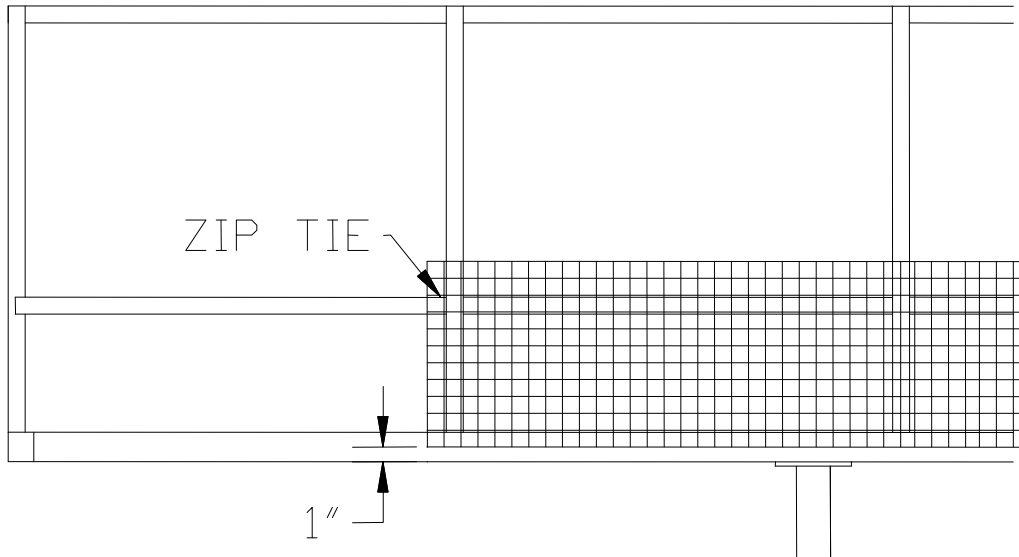

STEP 2. Continue to unroll the netting down the length of the canopy frame and zip tie it around the flat bar, making sure that the netting is stretched tight and the bottom stays an inch from the bottom of the frame. In the corners pull the netting tight and zip tie so it is not bunched up. Continue around the canopy frame until reaching the starting point, overlap the netting six inches and zip tie. Cut off any excess netting.

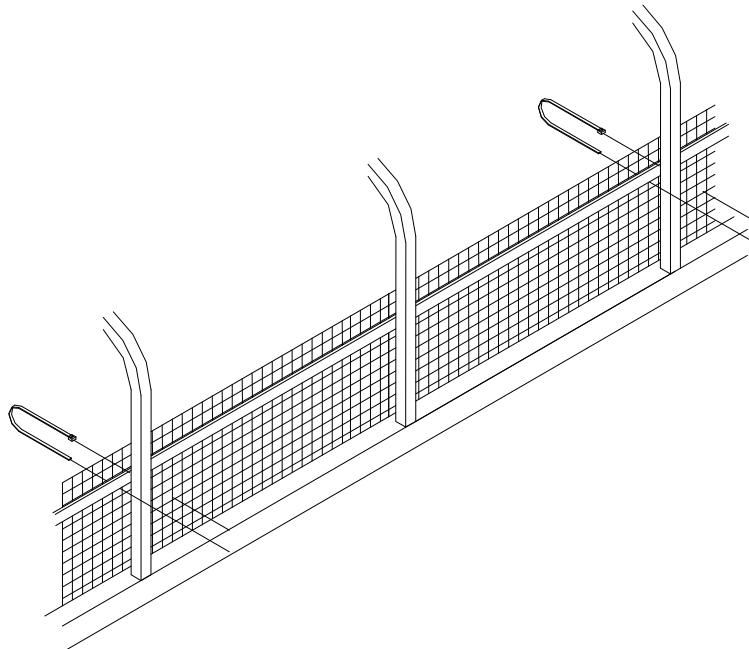

Porta-Dock, Inc.